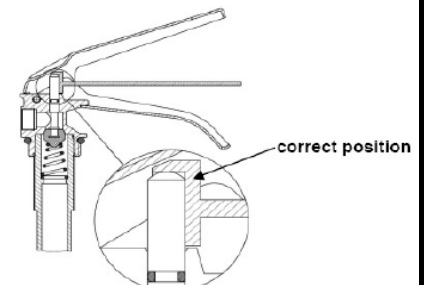
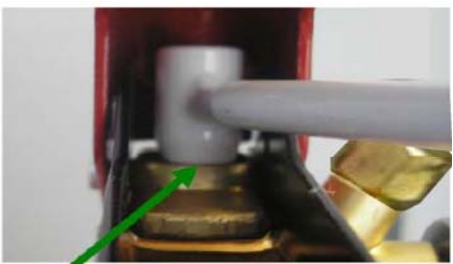


**Process for testing the extension of the valve bolt and change the lever****Tools:**



**New lever, red, black or stainless steel,  
for orders use order form**

**1. Remove the safety pin****2. Insert the gauge horizontal to check the extension of the bolt****3. No gap = extension is acceptable**

no gap !

**4. Gap = change the lever**

attention gap sort out !

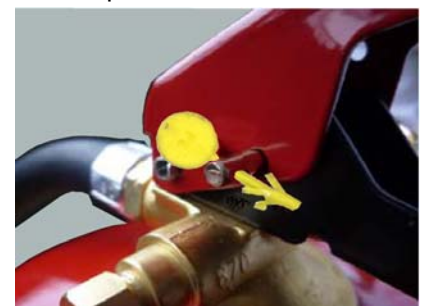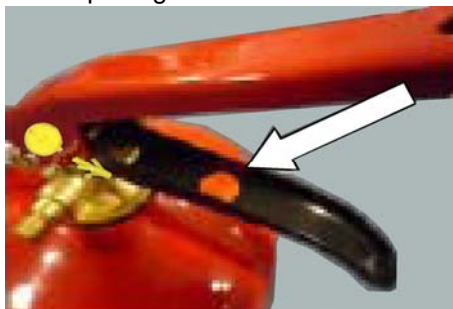**5. Remove the dowel pin****6. Assemble handle and new lever****7. After check, assemble safety devices and put a red dot on the handle****8. Red point glue on**

Attention! Red dot on every checked extinguisher.